
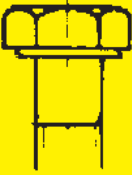
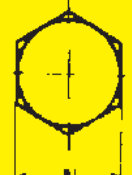
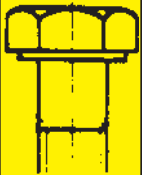
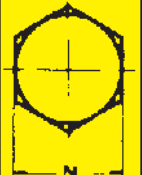
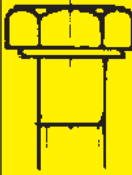
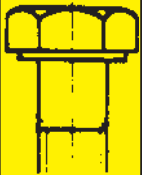


Skruvnycklar
Välj rätt nyckelvidd

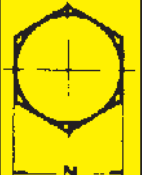

Skruvvar ISO (= standard)

Metriska (SS-ISO 272)				Unified (SS-ISO 272)			Tråskruv (SS 2020) (DIN 571)	
Gänga	M 6 S sexkant- skruv	M 6 SF sexkantskruv med fläns	SB Stålbyggn.- skruv	Gänga UNC- UNF	U 6 S sexkant- skruv	SB Stålbyggn.- skruv	Gänga	T 6 S sexkant tråskruv (s.k.Fransk)
	 	 	 		 	 		
	N	N	N		N	N		N
M 1,6 M 1,8 M 2	3,2 3,2 4							
M 2,2 M 2,5 M 3	4 5 5,5	5 7						
M 3,5 M 4 M 4,5	6 (5,5) 7 7	7 9,5						
M 5 M 6 M 7	8 10 11	7 8 11 8 10 10 13,8		1/4	7/16 11,11		M 6	10
M 8 M 10 M 12	13 16 (17) 18 (19)	10 12 17,7 13 14 21,6 15 26,6	18 (19)	5/16 3/8 1/2	1/2 12,7 9/16 14,29 3/4 19,05	3/4 19,05	M 8 M 10 M 12	13 16 (17) 18 (19)
M 14 M 16 M 18	21 (22) 24 27	18 19 30 21	24	5/8	15/16 23,81	15/16 23,81	M 16	24
M 20 M 22 M 24	30 34 (32) 36	27	30 34 (32) 36	3/4 7/8 1	1 1/8 28,58 1 5/16 33,34 1 1/2 38,1	1 1/8 28,58 1 5/16 33,34 1 1/2 38,1	M 20	30
M 27 M 30 M 33	41 46 50			1 1/4	1 7/8 47,63			
M 36 M 39 M 42	55 60 65			1 1/2	2 1/4 57,15			
M 45 M 48 M 52	70 75 80			1 3/4 2	2 5/8 66,68 3 76,2			
M 56 M 60 M 64	85 90 95							
M 68 M 72 M 76	100 105 110							
M 80 M 85 M 90	115 120 130							
M 95 M 100 M 105	135 145 150							
M 110 M 115 M 120 M 125	155 165 170 180				Uppgifter inom parentes avser äldre standard (1985). Skruvar med flera måttuppgifter för nyckelvidd = avviker mellan olika fabrikat.			